



### Transmitter control and function

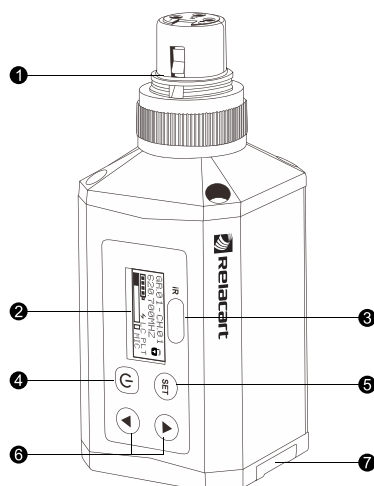

- ❶ Balanced XLR audio input interface, can set the phantom power (48V).
- ❷ OLED display: display frequency and channel, current battery level and other information.
- ❸ IR window.
- ❹ Power button: touch to turn on or long press to turn off the power; touch to return to the menu.
- ❺ "SET" button: 1. Press this button to enter the menu or confirm the menu settings.  
2. Press this button twice to lock or unlock the operation.
- ❻ "◀ / ▶" button: select menu settings.
- ❼ Battery compartment: use two AA batteries (pull to open the battery door).

### Display interface, menu structure

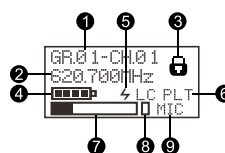

- ❶ Group and channel
- ❷ Frequency
- ❸ Key Lock
- ❹ Battery display
- ❺ 48V output
- ❻ Low cut
- ❼ Audio indication
- ❽ Distortion indication
- ❾ Mic input, Line input

UP 2 Transmitter

- INPUT AUDIO: (Mic input, Line input)
- PHANTOM
- Low Cut
- Language

### Product Specification

Frequency response	80 Hz ~ 15 KHz
Reference input level	-20 dBV
Phantom power supply voltage	48 V
Signal to Noise Ratio	<100 dB
Power Requirements	AA 1.5V x2
Current Consumption	2.0~ 3.6V
Overall Dimensions	105 x 43 x43(mm)
Net Weight (without battery)	133g

### Precautions

#### Safety operation and Notice

1. Please read instructions for safety operation carefully before installation and operation. Please save your safety operation guide for future reference.
2. Do not scratch, bend, twist, stretch or heat the power cord as this may cause damage to the power cord, resulting in a fire or electric shock.
3. Do not open the device shell, otherwise it may cause electric shock. If you need to repair, maintain or repair, please contact your local agent.
4. Do not touch the power plug with wet hands as this may cause a fire or electric shock.
5. Do not attempt to modify this device. Failure to do so may result in personal injury or product malfunction.
6. Do not use this equipment near water.
7. If the power cord is damaged (such as a broken wire or bare core), obtain replacement parts from your dealer.  
Continued use of the equipment with a damaged power cord may result in fire or electric shock.
8. To move the device he power, unplug the power cord, and unplug all connecting cables as this may damage the cable, resulting in a fire or electric shock.
9. Before cleaning the device, unplug the power cord and unplug all connecting cables. Please clean it with a dry soft cloth.
10. If the device is not in use for a long time, turn off the power, it is best to unplug the socket
11. With the power plug and appliance coupler as the disconnecting device, it should be kept easy to operate.
12. For the safe use of the equipment and adequate ventilation, the minimum clearance around the equipment should be maintained at a distance of 5 cm or more.
13. DO NOT cover the Ventilation holes, such as: newspaper / fabric / curtains and other items.
14. Equipment should not be placed on a bare flame source, such as: lit candles.
15. Battery should not be exposed to sunshine, roasted or other high temperature overheating environment.
16. Do not throw the waste battery, please put in the designated bins.
17. Water protection rating: IPX0
18. The device can be used normally in tropical / temperate climates.
19. This product is only suitable for safe use at the altitude of 2000m and below.
20. This symbol "⚡" indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
21. All Relacart products will be afforded one year free maintenance except for man-made damage, such as:
  - the device is damaged by man-made factors.
  - the device is damaged by improper operation.
  - some components are damaged or loss after the self-disassembly.